

Charging

- Open the flap on the back of your OPS HD by pulling down to expose the USB port and micro memory card slot.
- Insert the included USB cable into the port and the other end into your computer. This will begin charging your OPS HD.
- The left LED will turn BLUE as long as the camera is charging. When the charging is complete, the LED will turn off.

Use only the supplied USB cable. Others may not work and may harm your camera.

Inserting Micro Memory Card

- Insert your micro memory card, gold contacts facing up, into the slot.
- Be sure to push it all the way in with your nail until you feel the spring and hear it click securely into place.

Beware of counterfeit cards.

Shooting Video

- To shoot video, be sure to slide the switch up to the VIDEO position.
- Now press and hold the power button in the middle. You will hear a beep and see the GREEN LED briefly light up, followed by the RED. You are now recording video!
- To stop recording, press and hold the power button until you hear a low-pitched beep.
- The RED LED will turn off.



Time-Lapse Photo Switch

- To shoot time-lapse photos, slide the switch down to the PHOTO position.
- Now press and hold the power button in the middle until the power comes on. The LED will now flash alternately RED and GREEN.
- Your OPS HD is now taking photos - one photo every two seconds, until you stop by pressing and holding the power button as you did with the video.



Unlock Switch

- Your OPS HD comes with the locking switch in the UNLOCKED position. This position will let you start and stop your video or photos at any time. You should keep the switch in this position.

LED Functions

- When recording video, the LED on the right will shine RED.
- When recording in Time-Lapse Photo mode, this LED will flash RED - GREEN - RED - GREEN.
- If your memory card is full, this LED will flash GREEN for 30 seconds and then turn off.
- If there is no memory card in your camera, or if there is an error with the card, this LED it will flash GREEN for 30 seconds before turning off.

Setting the Time & Date

- Create a text document (.txt file) named "time", with the date and time written as the following: YYYY, MM, DD, HH, MM, SSS (**2012 10 31 14 42 00**)
- Save the file to an empty memory card, insert it into your camera, and power up. The file will be read and deleted and your camera will now save your videos with the correct date & time.

OPS HD, when fully charged, can record for 4.5 hours on a 16GB Micro Memory Card! 4GB-64GB Cards are compatible

Your Recorded Files

- When the OPS HD is turned on and connected to your computer, a window should pop up showing the contents of your memory card. If no window pops up, you should remove the memory card from your camera and insert it into your computer (or into an adaptor and then into your computer).
- You can now copy, move, rename, or delete the files on your card. We suggest that you copy your files to your computer first, before playing or editing them.
- You may also insert your memory card into your computer or into a card reader that is attached to your computer. This way, you may work with your files apart from the camera.

Mounting

- The OPS HD camera's patented 8-direction mounting system gives you a variety of mounting options.
- The three dimples on each side of your camera match up with the three bubbles on the gripping parts of the mounts. You can rotate your camera inside your mounts from the 12 to 3 to 6 to 9 o'clock positions and face it either forwards or backwards.
- Why rotate your camera? Suppose your mount is mounted at an angle that would cause your video to be rotated 90 degrees. All you need to do is rotate your camera inside the mount so that the top is facing up. This will ensure that your video comes out right side up. ***The engraved Tachyon logo shows which side is up.***
- A tether is also included with your OPS HD. Thread it through the hole on the back of your camera and make use of it when engaging in very extreme activities, as a backup to your standard mounts.
- The Rainproof Cover is best used when recording in drizzle or rain, or when engaging in activities that potentially might harm the lens of your OPS HD, such as paintball, airsoft, or when riding in dirt and gravel.
- ***You can find a more detailed OPS HD manual on our website - www.tachyoninc.com. Follow the links in the menu to the OPS HD manual. This online manual will have video instructions and more instructive photos.***

Modular Mounting System

Snap your mounts together.
Align and lock them with the three
bubbles and dimples.



Rainproof Cover
OPS HD
Clip Mount



OPS HD
Contour Mount

You may rotate your OPS HD
inside the mount in order to
keep your video at
the correct orientation.



Tripod Mount
Tripod or Suction Mount
Not Included



Safety Tether

Additional Accessories Available at: www.tachyoninc.com

Handlebar Mount, Impact Armor, Micro Memory Cards, Charge n' Record Chargers, GunCam™ Mounts

Need Support? support@tachyoninc.com

Firmware Options: Tachyon offers various firmware options for the OPS HD, designed to give you specialized functions for special uses. See our main page at tachyoninc.com for descriptions and then contact support@tachyoninc.com if you would like to request specialized firmware for your camera.