

- [1] Use hex key to loosen hinge. Pull up the U-shaped camera holder.
- [2] Use hex key to remove screw and separate the top part of the mount from the clip.
- [3-4] Fasten the camera holder through the bill of the cap using the screw and nut.
- [5] Adjust the angle of the camera and tighten the hinge with the hex key. Don't overtighten.
- [6] You are ready to shoot. Always use the rubber cover to keep dust off of your OPS HD.